

# HC-198 Standalone Controller Quick Start Guide



Rev. B

### **Important**

- Failure to adhere to all the safety warnings in the manual may result in damage or injury.
- Remove all the protective film from the CLiC glass prior to connecting the wiring to the HC-198.
- Do not apply power to the system until all the wiring is completed.
- Do not change trigger mode while the HC-198 is powered.
- This product is for indoor use only.


Before continuing, verify that you have properly completed the CLiC Glass wire connections prior to connecting wires to the HC-198. Refer to the wiring guide at <a href="https://www.clicglass.com">www.clicglass.com</a>

#### **Contents**

1x HC-198 Standalone Controller
1x Cardinal Screwdriver
1x Quick Start Guide
1x 6' Power Cable
4x 10-32 Rack Mount Screws

Pre-attached 8x 4-Position Connectors 8x 2-Position Connectors

Keep the packaging in the event you need to ship the HC-198.

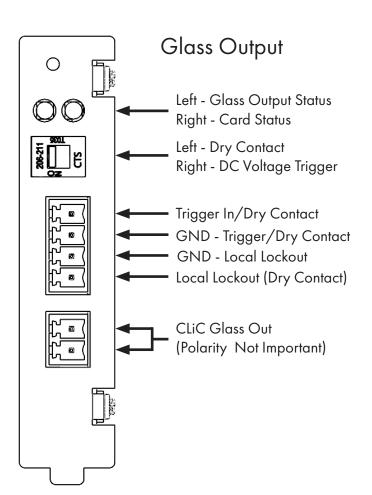

### **Select Trigger Mode**

Dry Contact - Triggered by a contact closure/relay. DC Voltage Trigger - Maximum input voltage +25VDC.

## Terminate and Connect all Trigger Connections

Terminate all wires connected to your switch device. Multiple channels can be triggered by the same switch device if they are set to the same Trigger Mode and wired in parallel.

## Terminate and Connect all the Local Lockout Connections

This allows the ability to keep the window in the private state even if the glass is switched from the local switch. This terminal only accepts a dry contact (relay) input for triggering.

## Terminate and Connect all the Glass Connections

Ensure that all the Preserve film has been removed from the glass before connecting the glass lines to the HC-198. Static that is discharged from the removal of such film can damage the HC-198.

The latest version of this document, as well as a detailed manual can be found using the QR code at the top of this page or at: <a href="www.clicglass.com">www.clicglass.com</a> The installer MUST read and understand the controller manual in its entirety and rely on those documents for all warnings, procedures, and standards.

For support, email clicsupport@cardinalcorp.com or call 952-314-4757